


6. INSERT NEW BARREL WITH  
GREEN SERVANT KEY (ENSURE  
BARREL IS FULLY ENGAGED)




7. OPERATE BARREL AS USUAL  
WITH GREEN SERVANT KEY

FOR FURTHER INFORMATION PLEASE CONTACT YOUR CAMEC DEALER

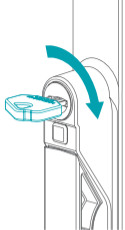


HOW TO EXCHANGE BARRELS  
FOR 1 KEY SOLUTION



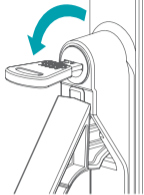


1. REMOVE KEY  
IN UNLOCKED  
POSITION\*

\*FOR BARREL EXCHANGE ONLY

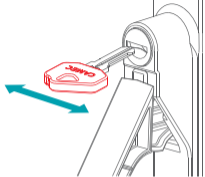


2. INSERT **CX7\*\*** ASSEMBLY  
KEY AS SHOWN, WRIGGLE  
KEY TO FULLY INSERT


\*\*IF CX7 KEY DOES NOT FIT IN YOUR BARREL, PLEASE USE ALTERNATIVE ASSEMBLY KEY PROVIDED

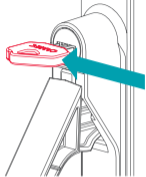

3. APPLY PRESSURE  
TO THE RIGHT SIDE  
OF THE KEY HEAD

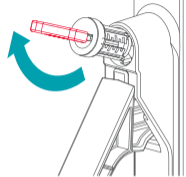

4. WHILE APPLYING  
PRESSURE, PULL KEY  
TO REMOVE BARREL

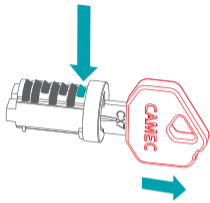

5. PUSH IN FIRST TUMBLER  
TO HELP REMOVE KEY  
FROM BARREL